

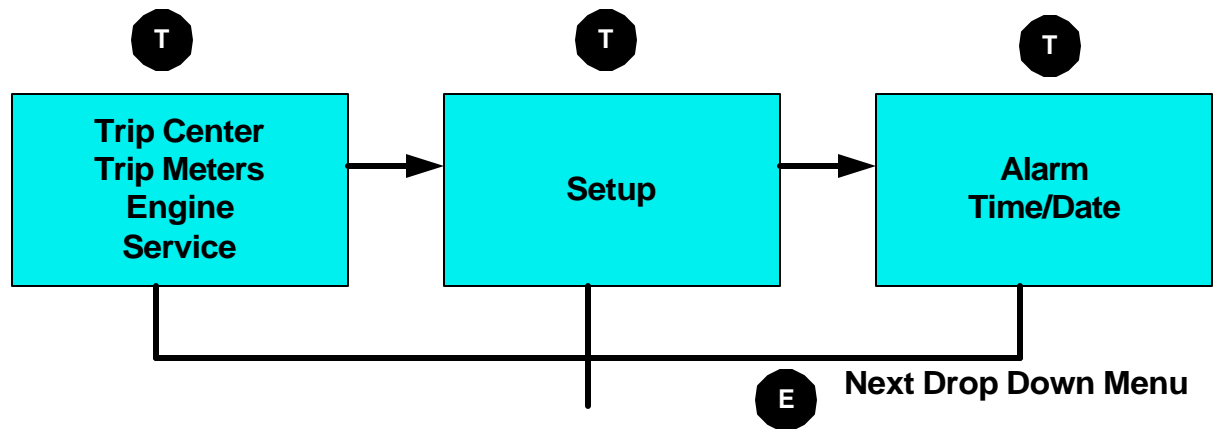


# Info Center Map Top Level Operation

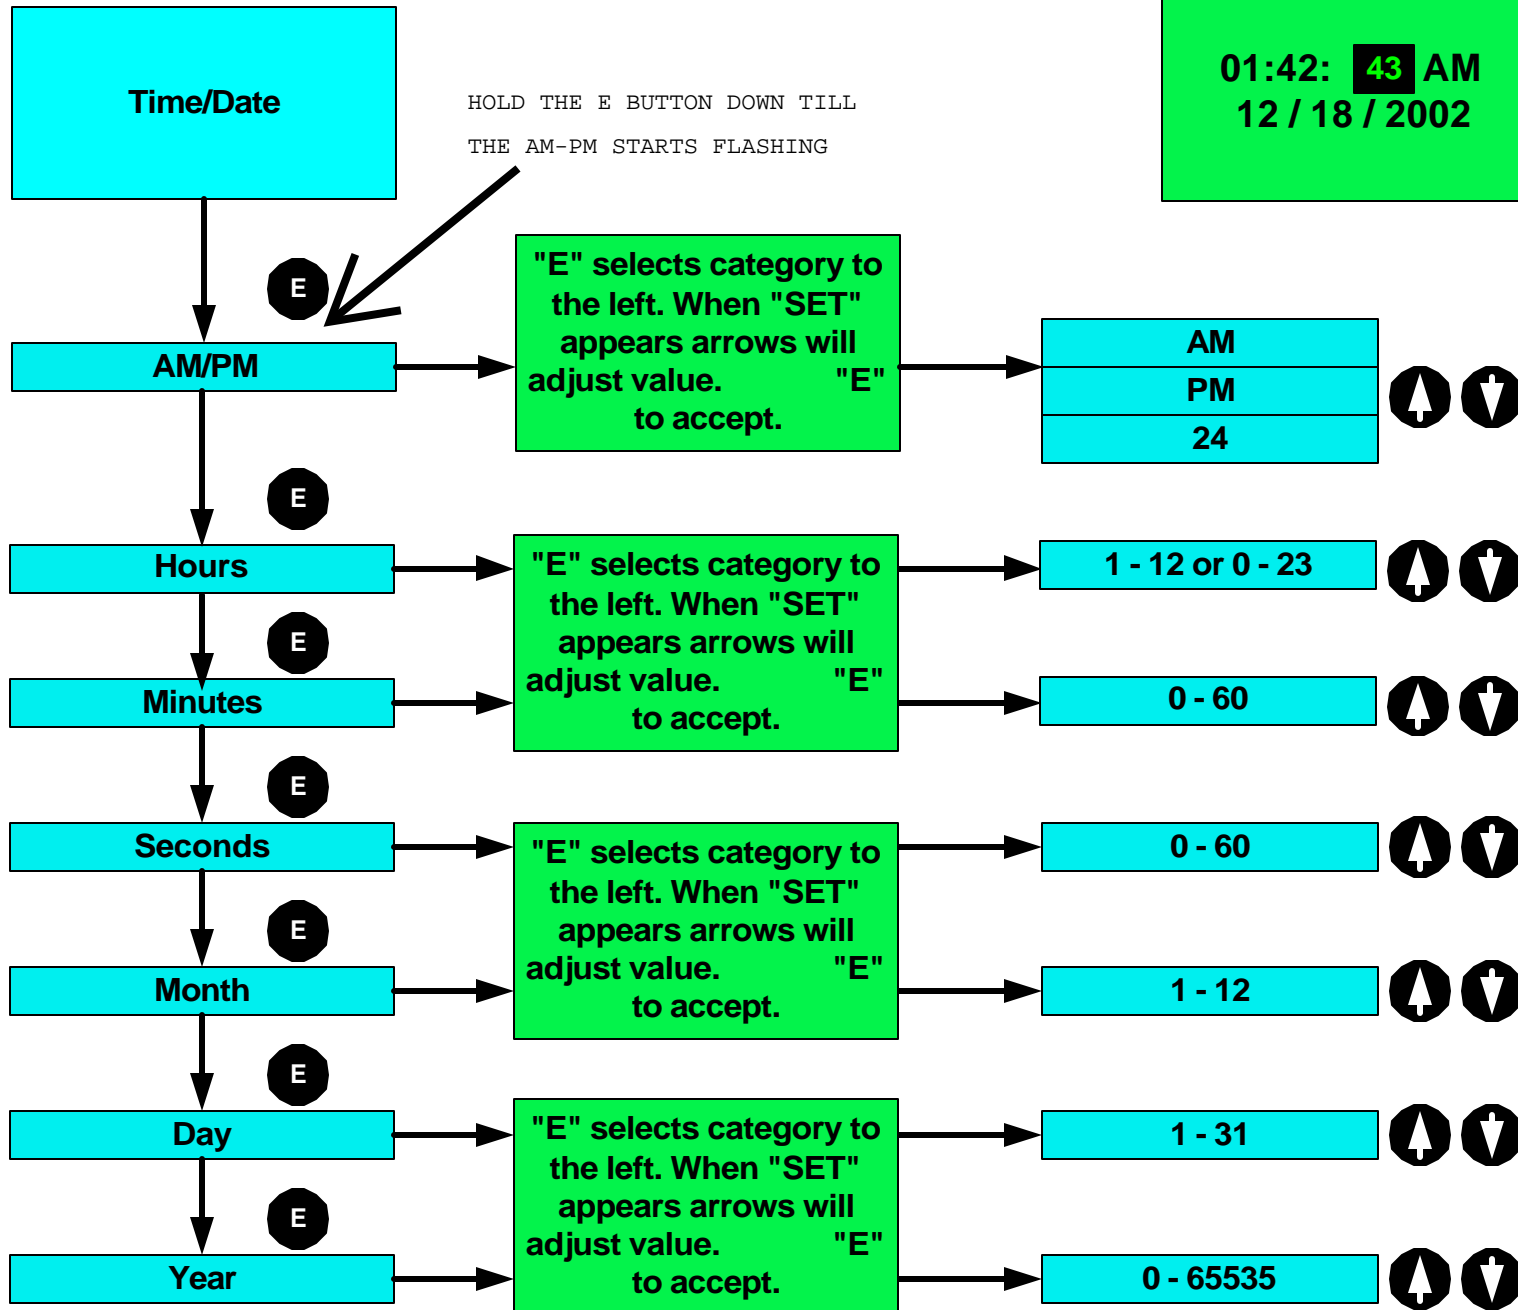

Example  
Screen

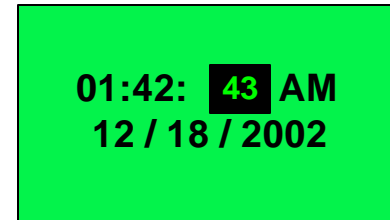

Clock set screen

At power up the Freightliner Custom Chassis logo will be displayed (default is 2 seconds)



Pressing “H” while logo is displayed will bypass the logo and go to the next screen

**CLICK ON THE “H” TO CONTINUE**

# This is the Main or Home screen

This screen is the central point for the system.  
From here you can get to all of the other screens.



TRIP CENTER – Average economy, Instant economy and Fuel level

TRIP METERS – Trip meter 1, Trip meter 2 and Odometer


ENGINE – Battery, oil pressure, Engine temperature, Engine RPM, Road speed and E-Info

SERVICE – Diagnostic area for FCCC dealers

From the Main or Home screen



Press "T"= Toggle to enter the SET UP, ALARM and CLOCK screens

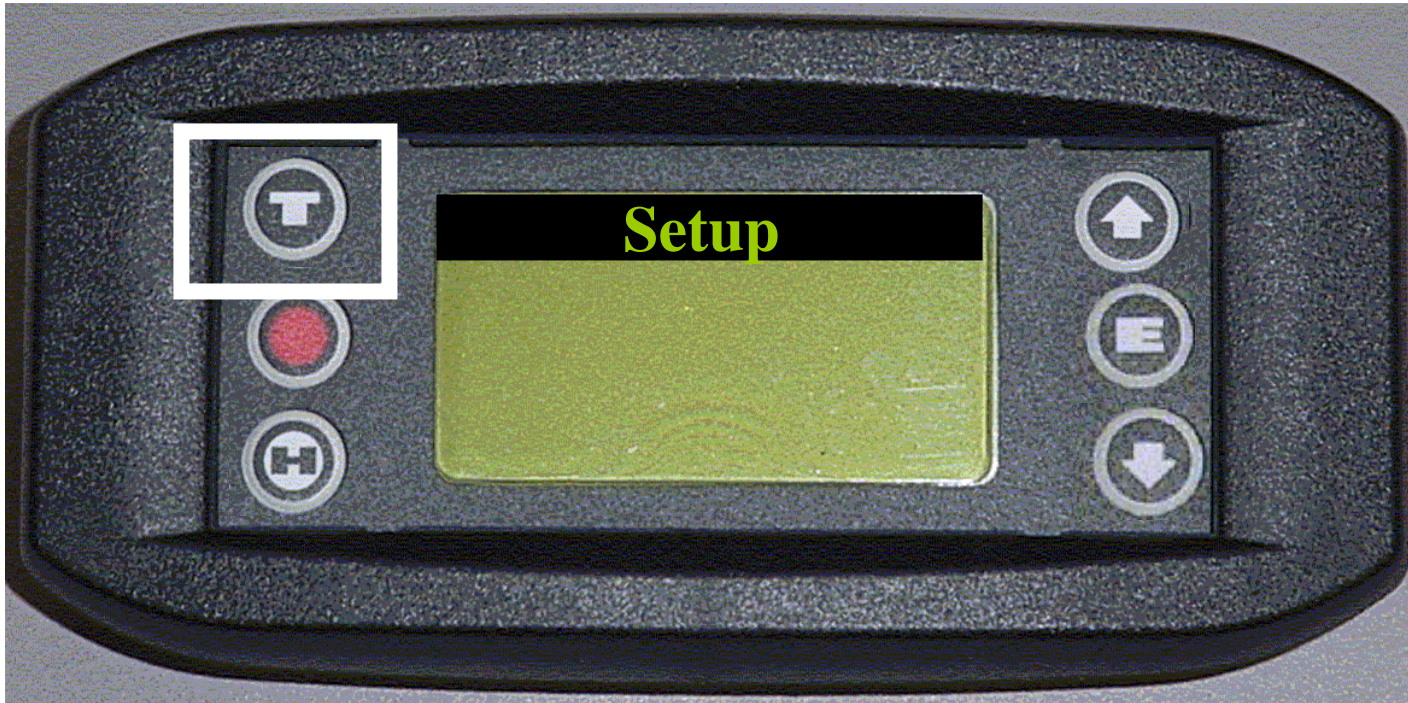


Press "T" = Toggle to enter the ALARM and CLOCK screen area.



Press “E”nter to set the CLOCK and DATE.

# CLOCK 12 hour display

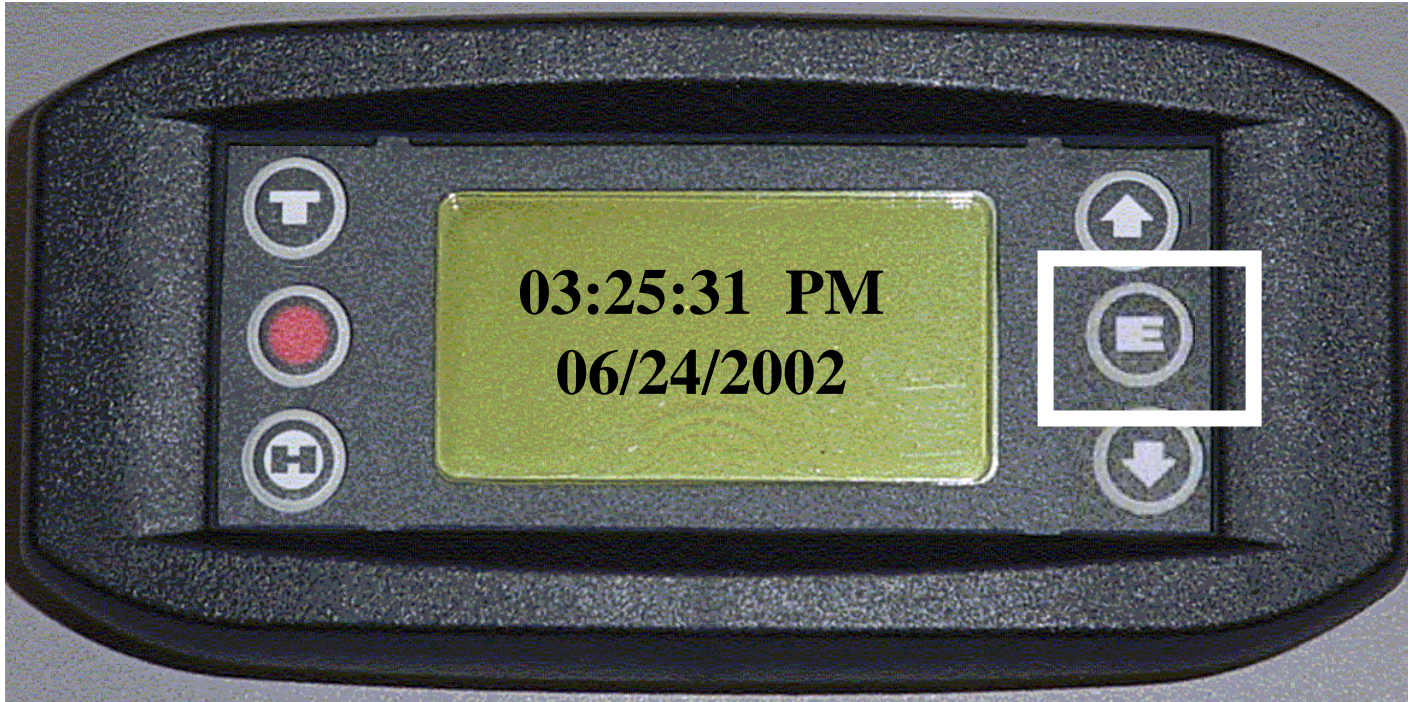

To set the clock the “E” Enter button **must be held until** the AM/PM is highlighted and SET appears.  
Use the arrow keys to adjust  
Press the “E” nter button to move on to the next item to be set

# CLOCK 24 hour display



By pressing the “T” Toggle button you can switch from 12 hour to 24 hour clock display